

ASSEMBLY INSTRUCTIONS

DVDC0075


Tools and Materials that may be required:

- ¼ or ½ inch open/box end wrench or socket set, and screw driver set.

Assembly Procedure:

Standard Access Door Configuration: The standard access configuration is with front locked access. This may easily be adjusted – See ACCESS DOOR ROTATION INSTRUCTIONS in the Downloads

1. Locate the keys, unlock and open the key-locked access doors.
2. Rotate the top section so that the access doors will be in the desired positions – left, right, front or rear access configurations.
3. Locate and install 4, 8/32" X 1/4" machine screws and tighten as needed [DO NOT OVER TIGHTEN].
4. To secure to floor wall or both, see "SECURE INSTRUCTIONS_FLOOR EXPRESS" which can be found at: <http://www.takebackexpress.com> – "Downloads"

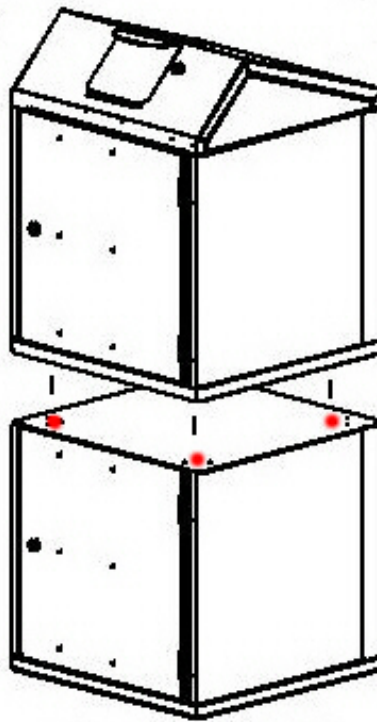

DVDC0073 plus storage compartment Shown Above

dVault Company, Inc. • 9800 Mount Pyramid Court • Suite 400 • Englewood, Colorado • 80112
Phone: (720) 895-1908 • Fax: (720) 895-1909 • World Wide Web: <http://www.dvault.com>

dVault